

➤ **Problems that may arise and identify them**

Nr crt	Malfunction	Cause of malfunction	Solve the problems
1	The speed is too low it does not work at a higher speed	<ol style="list-style-type: none"> 1. The battery is almost unloaded 2. Acceleration lever weakened 3. Acceleration Needle Failed 	<ol style="list-style-type: none"> 1. Charge the battery 2. Check if it is tight 3. Go to the vendor for change bow
2	Vehicle is not turned on when switch contact key	<ol style="list-style-type: none"> 1. The battery wire has weakened 2. Both connecting wires with left-hand levers have failed 3. The connection wire between the motor and the controller has been broken or broken 	<ol style="list-style-type: none"> 1. Repair 2. Fix 3. Go to the supplier or an accredited person to repair
3	After charging the battery, the vehicle does not run at the required speed	<ol style="list-style-type: none"> 1. Wheels do not have adequate pressure 2. The battery is not charged enough 3. The old battery has deteriorated 4. The load is too high, the wind is too strong, the brake is too tight 5. The parking brake is not fully deactivated 	<ol style="list-style-type: none"> 1. Put pressure on the tires 2. Recharge your battery check the connection thread 3. Replace the battery 4. Download the vehicle until at an appropriate weight, wait until the wind will quit, adjust the system braking 5. Disengage the brake end parking

4	Battery is not charging	<ol style="list-style-type: none"> 1. Connection wires have weakened 2. The connection socket is not in contact 3. Battery faulty 	<ol style="list-style-type: none"> 1. Repair 2. Repair or repair with spray contact 3. Replace the battery
5	It is not accelerating	<ol style="list-style-type: none"> 1. Acceleration lever faulty 2. Faulty or disrupted brake pedal sensor 3. Overheated engine 4. Contact imperfect 	<ol style="list-style-type: none"> 1. Replace the throttle lever 2. Replaced or adjusted 3. Refurbished or replaced 4. Checked and replenished with spray contact or replace sockets times cable
6	It does not leave, but the engine is spinning	<ol style="list-style-type: none"> 1. Discontinued speed changer 2. The planetary break 	<ol style="list-style-type: none"> 1. Shift gear adjustment 2. Planetary replacement
7	Another problems	<ol style="list-style-type: none"> 1. When, after removing all the malfunctions listed above, you still have not identified the malfunction 	<ol style="list-style-type: none"> 1. When you encounter such situations, please contact product provider